



 
- Sharp alarm
- Ideal for use on doors and windows
- Easy to use ON/OFF switch

Door/ Window Magnetic and Vibration Alarm


The Ellies Magnetic and Vibration Alarm is ideal for use on doors and windows.

Installation and usage


Stick the vibration/magnetic alarm on a door or window with the double sided self adhesive tape supplied. An alarm will sound when an attempt is made to force the door or window open to which the alarm is attached. Alarm will sound for about 25 seconds and can be reset or switched off by moving the switch into the OFF position. Low standby current drain extends battery life (<math><40\mu\text{A}</math>). LR44 batteries included. Easy to use ON/OFF switch. When the alarm's tones are no longer audible it is time to change the batteries.

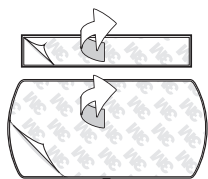

Remove double sided tape on the back of the unit.

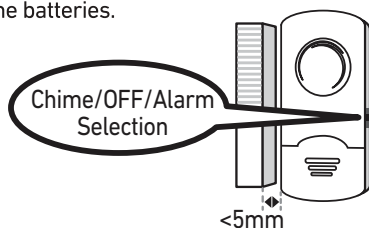

Attach product to door or window surface.

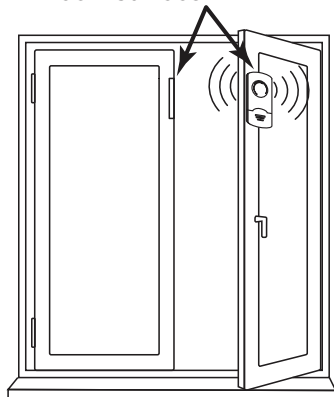

TECHNICAL INFORMATION

Specifications:

Current when disarmed:	<math><3\mu\text{A Vcc 4.5V}</math>
Current when armed:	<math><60\text{mA Vcc 4.5V}</math>
Volume:	90dB \pm 2dB at distance 0.3m
Alarm:	25 \pm 2 seconds
Batteries:	LR44 batteries (included)

CONTENTS

- 1 x Door/ Window magnetic and vibration alarm
- LR44 batteries

PACKAGING DIMENSIONS



Height (mm)	Depth (mm)	Width (mm)	Weight (kg)
188	18	98	0.05