

Original DStv 4136 HD Single View Remote Control



Product Code: BPUNIRM4136

Barcode: 600751600 3628



- For use with the DStv 4136 HD Single View Decoders only

Note:

- This remote is not a universal remote and cannot be programmed to control other audio/visual equipment.
- The DSTV HD Decoder must be set up to "listen" for the correct mode. This can be done in DStv Central.



About the Remote Modes

If you have multiple decoders in your home or even in the same room, you need to set the remotes (and the decoders) to different "modes", so that the commands sent from one remote, won't be picked up by the other decoder. If you are using two DStv HD Decoders, you will need to set one remote to TV1 mode (to operate the first decoder) and another remote to TV2 mode (to operate the second decoder).

This remote has three modes and can be set to TV1, TV2 or TV3 mode. The default mode is TV1.

You will see a **green** light blink every time you press a button on the remote control.

If the **green** light blinks below **i**, the remote is in TV1 mode.



To set the remote to TV1 mode: press and hold the **i** button for 3 seconds or until you see the **green** light blink on TV1 (below the **i** button).

If the **green** light blinks below **BACK**, the remote is in TV2 mode.



To set the remote to TV2 mode: press and hold the **BACK** button for 3 seconds or until you see the **green** light blink on TV2 (below the **BACK** button).

If the **green** lights blink below both **i** and **BACK**, the remote is in TV3 mode.



To set the remote to TV3 mode: press and hold both the **i** and **BACK** buttons for 3 seconds or until you see the **green** light blink on TV1 and TV2 (below the **i** and **BACK** buttons).

1. STANDBY
2. PROFILE
3. TV GUIDE
4. INFO
5. OK
6. P+ / P-
7. ALT
8. OPTIONS
9. 1 - 0
10. ARC
11. TV
12. SEARCH
13. BACK
14. DSTV
15. GRID
16. V+ / V-
17. MUTE
18. HELP



Using the DStv Remote - Hotlinks

You can use the hotlinks on your remote to quickly access key features of your DStv HD Decoder.

1. Goes to the **TV Guide** - 8 full days of programming information, allowing you to easily plan your viewing.
2. Goes to the **Search** - we have multiple search options available, making it easier for you to discover great entertainment.
3. Goes to **DStv Central** - the DStv HD Decoder has ONE central menu with all content and settings. Press the DStv button at any time to go directly to DStv Central.



PACKAGE CONTENTS

- 1 x BPUNIRM4136 remote
- 2 x AAA Alkaline batteries

PACKAGE DIMENSIONS



| | Height (mm) | Depth (mm) | Width (mm) | Weight (kg) | QTY |
|---------|-------------|------------|------------|-------------|-----|
| Blister | 278 | 40 | 128 | 0.10 | 1 |
| Carton | 250 | 500 | 400 | 4.5 | 30 |