



- Ideal for use on doors and windows.
- Alarm and chime mode.
- LR44 batteries included.
- Easy to install.
- Can be used for display cabinets.
- Suitable for indoor use only.

How the magnetic alarm works


An alarm will sound as soon as the door or window to which the unit is attached to, is opened.

Installation and usage


Remove the double-side adhesive tape covering the back of the magnetic alarm and mount the unit to the inside of a door or window. Repeat this procedure with the magnetic sensor and apply alongside the alarm.

Ensure that the alarm chime and magnetic unit are not more than 5mm apart when installing them on perpendicular window and door surfaces.

When the alarm's tones are no longer audible it is time to change the batteries.

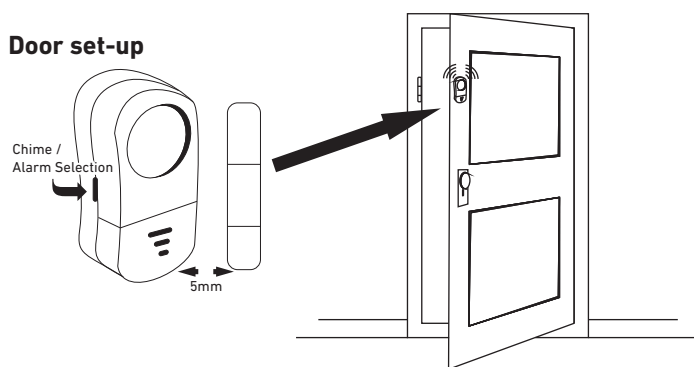

Window set-up

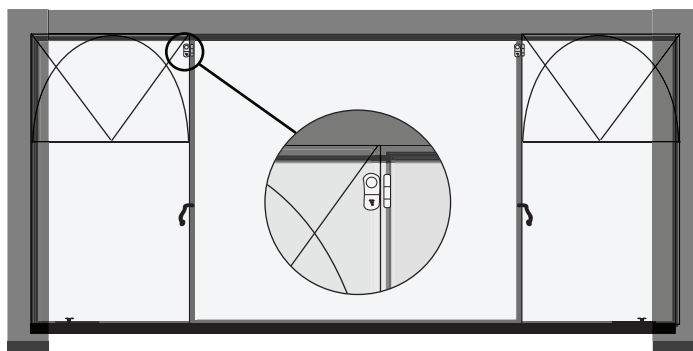

THE KIT CONTAINS

- 1 x Main alarm unit
- 1 x Magnetic unit
- LR44 batteries included

PACKAGING DIMENSIONS

	Weight (kg)	Height (mm)	Width (mm)	Depth (mm)
Package	0.1	186	95	28
Nett. Weight				